


Tap Adaptor Upper Ring nut Outer Ring nut nylex Button for . manual opening and closing Knob to set frequency watering time and to Turn off the display

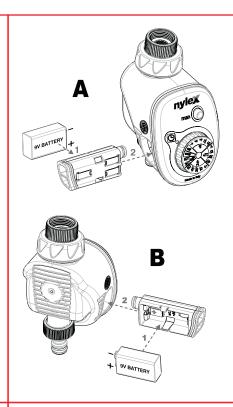

INSERTING AND REPLACING BATTERIES Follow the instructions as shown in Fig. A and B.

After having inserted a new battery, it's necessary to wait for at least 10 seconds before the program will start to become

GF33491139 | 710575

Only use one 9V alkaline battery, which should ensure the program to work for at least 6 months on continuous use with two watering cycles per day.

YOUR TIMER IS EQUIPPED WITH A PARTICULAR SAFETY SYSTEM DESIGNED TO STOP THE WATER FLOW IN CASE OF EXHAUSTED BATTERY.

TAP CONNECTION

Insert the Tap Adapter with filter inside the upper ring nut; loosen, by unscrewing the outer ring nut and then screw the upper ring nut onto the tap, tightening it firmly, but not too tight. Tighten the whole fitting by tightening the outer ring nut.

Turn on the tap to make sure there are no leaks.

If there are any leaks, unscrew the whole fitting, check that the internal adapter is positioned correctly and repeat the steps described above. Furthermore, check that the outlet connector is screwed on tightly.

IT IS SUGGESTED TO PLACE THE TIMER IN A PLACE SHELTERED FROM RAIN AND DIRECT SUNLIGHT. DO NOT LAY IT IN TAPS UNDERGROUND.

WATERING PROGRAMMING

To set frequency and watering time, turn the knob to the desired value. The watering will start after 3 seconds from the last rotation.

PROGRAMMING MODIFICATION

To change the watering program, turn the knob until the desired value.

EASY AM/PM PRESET PROGRAM - MUST SET AT 12PM

The Easy AM/PM Program has been designed to ensure your garden is watered efficiently two times a day, sunset and sunrise. Watering at these times is optimal as it prevents evaporation and water run off, Turning the knob to the "easy" position at 12:00, the program will carry out 2 daily waterings (fixed and cannot be modified): at 22:00 for the duration of 10 minutes and at 4:00 of the next day for the duration of 20 minutes. If the function is activated before or after 12:00, watering will be subjected to the same advance or late.

MANUAL OPERATION

By pressing the "man" button, the program will work like a normal tap, turning the water flow on and off each time the button is pressed. It's therefore possible to manually turn on and off the water flow, keeping in mind that, in case the water flow is turned on and you are unable to manually turn it off, watering will automatically stop after 1 hour. When "man" button is pressed during watering, the actual irrigation will immediately stop and the program that has been set will be erased.

Turn the knob in "off" position to immediately turn off the tap, the loss of any set program is, indeed, caused by switching off the

PERFORMANCE

Minimum operating pressure: 100kPa Maximum operating pressure: 800kPa

LITRES/MIN. AT VARIOUS PRESSURES kPa 100 200 300 400 500 600 Lt./1' 15 20 25 30 32 35

- Only use with water (avoid chemical substances or solvents)
- The water temperature should not exceed 40°c
- . In low temperatures (5° or less); uninstall the timer and bring it indoors to prevent damage
- · For outdoor use only
- · Always replace batteries before a long period of absence
- · Never use without the provided filter
- · Periodically check and clean the filter inside the ring nut
- Hand tighten to the tap only

GUARANTEE

AMES Australasia warrants that the Nylex tap timer will be free from defects in workmanship and materials for 2 years. If a defect in material or workmanship becomes evident during that period, AMES Australasia will, at its option, either; repair the product (or pay for the costs of repair of the product); replace the product; or refund to the customer the purchase price paid by the customer for the product. In the event of such a defect, the product should be returned to the place of purchase, together with proof of purchase for repair, replacement or refund. Any handling and transportation (and other expenses incurred in claiming under this guarantee) are not covered by this guarantee and will not be borne by AMES Australasia. The obligation of AMES Australasia under this guarantee is limited to the circumstances set out about and is subjected to; the customer being able to evidence the acquisition of the product, the purchase price paid for the product and the relevant defect in materials or workmanship; the product not having been altered, tampered with or otherwise dealt with by any person in a manner other than as intended in respect of the relevant product; and the product not having been used or applied in a manner that is contrary to customary usage or application for the relevant product or contrary to any stated instructions or specification of AMES Australasia. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refunded for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits given by this guarantee are in addition to the other rights and remedies which this guarantee relates.

*9V Battery Operated (not included)

AMES Australasia Ptv Ltd

ABN 89 169 427 061 Level 1, 660 Doncaster Road, Doncaster, Victoria 3108. Australia

For further information contact us on

Australia Free Call: 1800 335 019 New Zealand: 09 427 6042 www.nylex.com.au

